

Follow the instructions on the screen for descaling. This takes between 30 and 40 minutes.



Do not leave the machine unattended while descaling.



Necessities for descaling:

- 10 liter bucket
- 500 ml jug
- Funnel with screw-in coupling
- Drain valve key
- Allen key
- Safety gloves
- 50 gram Renegite













In the next step the system will depressurise.

STEAM
WILL COME OUT OF THE OUTLET







The system is depressurizing.


STEAM IS COMING OUT OF THE OUTLET

- 1. Remove the driptray and the waste bin
- 2. Pull the left drain hose all the way out
- 3. Place the hose in the jug







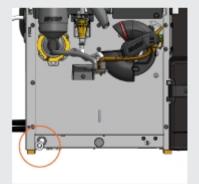





Use gloves the water is hot.



Steam can come out of the left hose

4. Place the drain key on the drain valve located at



- 5. Turn the drain valve slowly open
- 6. Wait till the steam boiler is empty (±350 ml)
- 7. Close the valve with the drain key









8. Dissolve the renegite in 250 ml warm water of approximately 50°C











Once the Renegite is poured into the steam boiler the procedure cannot be interrupted.



- 9. Open the lid of the machine
- 10. Unscrew the stainless steel cap carefully with the allen key
- 11. Screw the funnel tight with screw-in coupling
- 12. Pour the Renegite solution into the funnel
- 13. Pour 150 ml of tap water into the funnel



Do not leave the machine unattended



ñ







14. Unscrew the funnel and place back the stainless steel cap

15. Place the empty bucket under the outlet

í



Make sure the cap is closed properly









Descale procedure 1/3

HOT WATER AND STEAM
WILL COME OUT OF THE OUTLET



Descale procedure 2/3

HOT WATER AND STEAM
WILL COME OUT OF THE OUTLET



Descale procedure 3/3

HOT WATER AND STEAM
WILL COME OUT OFF THE OUTLET



Use gloves, the water is hot





Steam can come out of the left hose

- 16. Place a jug under the left drain hose
- 17. Open the drain valve and empty the steam boiler (500 ml)
- 18. Close the drain valve
- 19. Empty the jug and place it under the outlet









Descale procedure 1/2

FLUSHING STEAM BOILER

HOT WATER AND STEAM
WILL COME OUT OF THE OUTLET



Descale procedure 2/2

FLUSHING STEAM BOILER

HOT WATER AND STEAM
WILL COME OUT OF THE OUTLET



Use gloves, the water is hot





Steam can come out of the left hose

- 20. Place a jug under the left drain hose
- 21. Open the drain valve and empty the steam boiler (500 ml)
- 22. Close the drain valve and push the drain-hose back
- 23. Replace the drip-tray and waste bin

The descaling procedure is finished.





