

#### Necessities:

- Cleaning tablets (Rinza M61)
- 500 ml jug



To prepare the machine for cleaning, the machine needs to do a clean shot







Cleaning starts in (TimeRemaining) seconds

HOT WATER AND STEAM
WILL COME OUT OF THE OUTLET





HOT WATER AND STEAM
WILL COME OUT OF THE OUTLET

X

- 1. Open the door and place the service key
- 2. Remove and empty the drip tray and waste bin
- 3. Put 2 cleaning tablets into the jug
- 4. Place the jug under the outlet





In the next step the machine will dispense 50 ml of hot water into the jug to dissolve the tablets.









In the next step

HOT WATER
WILL COME OUT OF THE OUTLET










# HOT WATER WILL COME OUT OF THE OUTLET

- 5. Wait till the pills are completely dissolved
- 6. Keep the jug under the outlet





7. Press & hold the fill button to dispense COLD water into the jug. Release when the total content in the jug has reached 500 ml







- 8. Clean the milk hose with a clean damp cloth
- 9. Move the filled jug to the milk hose
- 10. Place the milk hose in the jug so it touches the bottom
- 11. Place the empty waste bin under the outlet








In the next screen the cleaning process will start.



The cleaning process cannot be aborted.

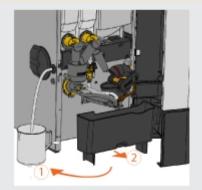





In the next step

HOT WATER AND STEAM WILL COME OUT OF THE OUTLET







HOT WATER AND STEAM
WILL COME OUT OF THE OUTLET

- 12. Remove the jug
- 13. Clean the milk hose with a clean damp cloth
- 14. Place the hose in the 2-6°C / 35-42°F milk



- 15. Empty and clean the waste bin and drip tray
- 16. Reposition the waste bin and drip tray
- 17. Remove the service key and close the door

The cleaning is finished.





Repeat the cleaning if the milk hose is not visibly clean.

